




Ground Mount Truss Assembly Instructions

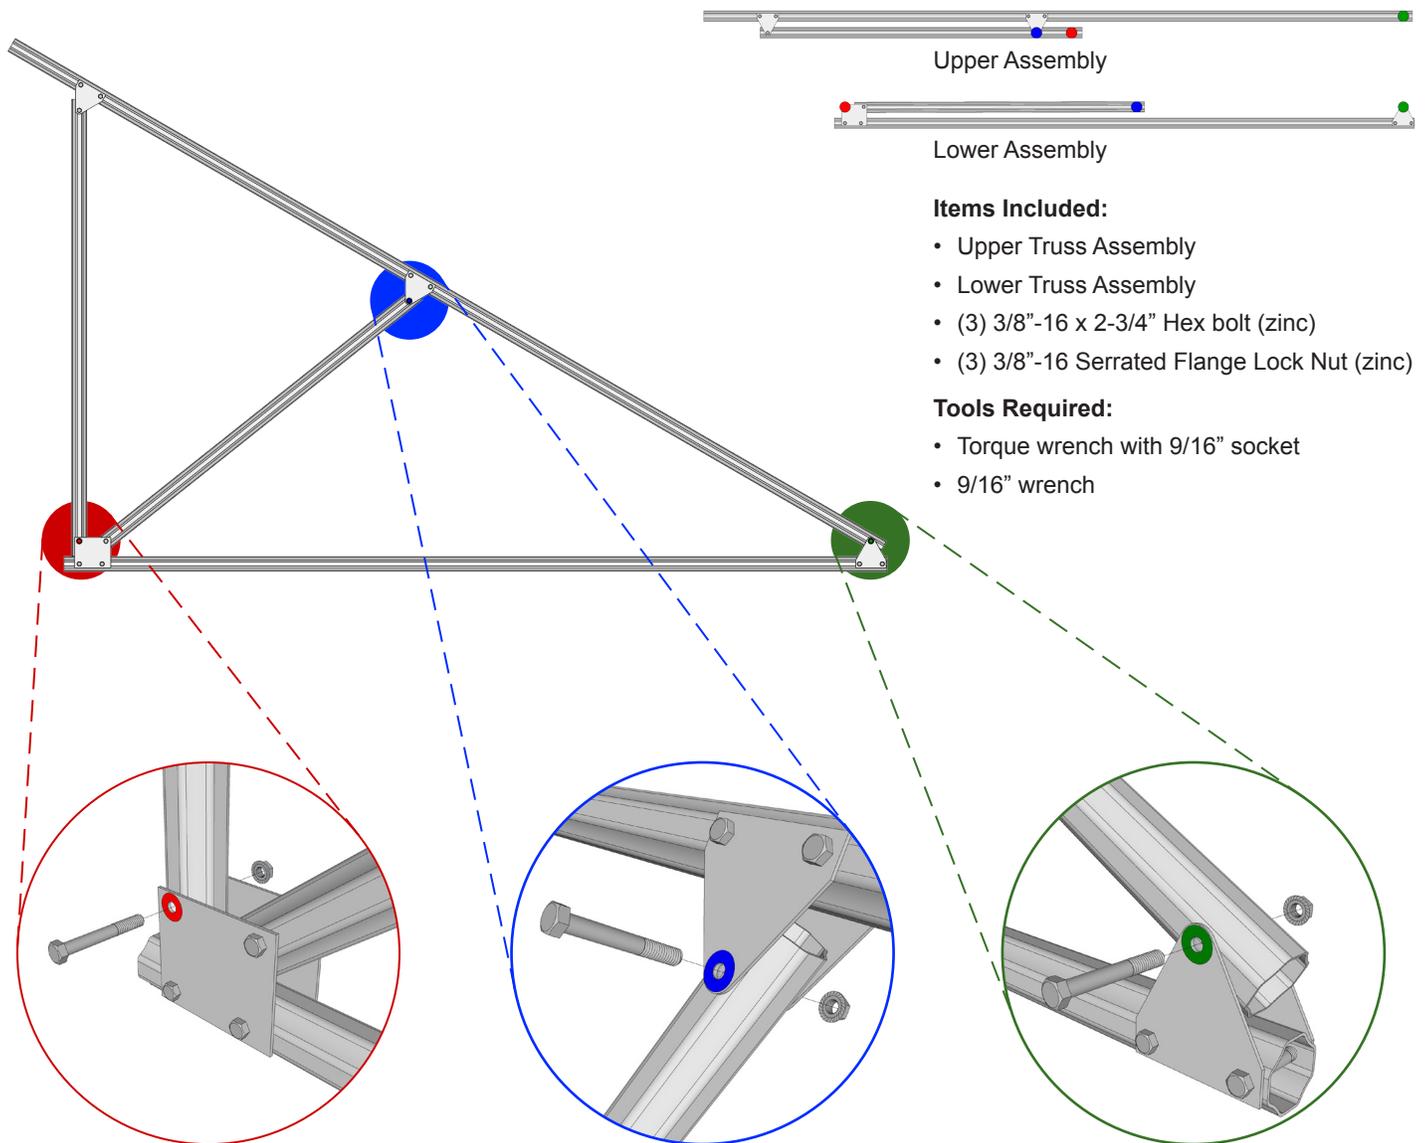

Upper Assembly

Lower Assembly

Items Included:

- Upper Truss Assembly
- Lower Truss Assembly
- (3) 3/8"-16 x 2-3/4" Hex bolt (zinc)
- (3) 3/8"-16 Serrated Flange Lock Nut (zinc)

Tools Required:

- Torque wrench with 9/16" socket
- 9/16" wrench

Assembly Steps

1 Identify Upper and Lower Sub-assemblies and align end of rails to brackets matching red, blue and green color coding.

2 Bolt assemblies together using 3/8"-16 Lock Nuts and 3/8"-16 x 2-3/4" Bolts.

3 Tighten ALL nuts and bolts to 17 ft-lbs.

One or more patents apply to this product including without limitation: US Pat. 8,448,405; 8,479,455; 8,661,765; 8,689,517; 8,707,654; 8,707,655; 8,752,338; 8,833,032; 8,833,033; 8,869,490; 9,068,339; 9,106,023; 9,473,064; D415,847; D617,174; D636,656; D639,143; and/or D639,144.

